

STALLFOUNT II - COVER AND FLOAT REPLACEMENT

1. Remove cover by twisting counter clockwise.
 2. Loosen locking nuts on trough screws and remove screws.
 3. Place new bracket on top of trough and reinstall screws and locking nuts. Screws should be left sticking out 3/4"
 4. Align brackets by test fitting the new cover with holes prior to tightening locking nuts.
 5. Replace old float with new float.
- NOTE: Star washer should be positioned between float and valve arm.
6. Install new cover and secure with included cover screws.

