

Instruction Sheet For




240 Volt Self-Regulating Heat Cable Part Number 16713

NOTE: Electrical services must be made and maintained by a qualified electrician. Each fountain must be wired through a fuse box with the proper size wire (see table below for electrical specifications).

Cable Length	Volts	Watts	Amps
6 feet	240	30	0.125

- 1) DISCONNECT ALL ELECTRICAL SERVICE TO THE FOUNTAIN.
- 2) Feed the sealed end of heating cable up through the water supply opening next to the supply line.
- 3) Feed the heat cable over the valve and then back down the opposite side of the supply line and down into the tile. Caution-Cable should not be bent smaller than 1/2" diameter.
- 4) Install the wire ties (provided) around the supply line to hold the cable in place.
- 5) Connect the ends of the heat cable to the electrical power source, making sure the braided cable is connect to a proper ground.
- 6) An alternate method is to install a 3-prong plug to the cable heater and plug into a 240-volt outlet. Make sure the outlet is properly grounded.
- 7) Re-establish electrical power to the fountain.

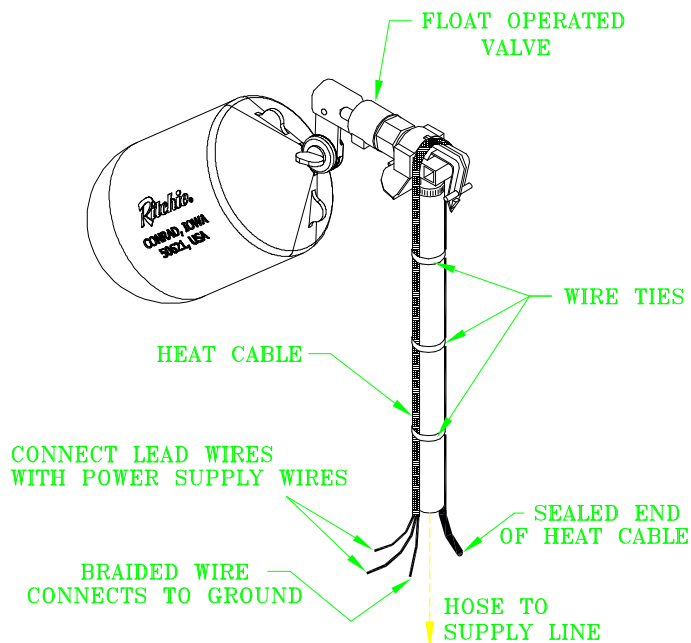

NOTE: The self-regulating heat cable provides safe, reliable heat for freeze protection. It saves energy because it has its own built in thermostat, which cuts down the heat as the temperature rises. The thermal output rating (watts/foot) varies directly in proportion to the temperature it senses. Although this cable regulates itself, it does not turn completely off. Because of this the electrical supply should be shut off during warm weather.

WARRANTY FOR RITCHIE SELF-REGULATING HEAT CABLE

Ritchie Industries, Inc. warrants its products to be free of defective materials and workmanship. Defective part(s) will be repaired or replaced, at the option of Ritchie Industries. This warranty specifically excludes all labor and shipping charges.

This warranty does not apply to any appearance items, to any product whose exterior has been damaged or defaced, to any product subjected to misuse, abnormal service or handling, and to any products altered or repaired with other than original equipment or manufacturer's parts.

The period of warranty begins at original date of purchase as follows: Warranty for 1 year from date of purchase, proof of purchase required. All warranty claims must be processed through an Authorized Ritchie Dealer.

Ritchie Industries, Inc.
P.O. Box 730
120 S. Main
Conrad, Iowa 50621
641-366-2525
Fax 641-366-2551

Part # 11679
05 Jan 2007